## Instructions for maintenance

©2007 Kaiser & Kühne Freizeitgeräte GmbH

Im Südloh 5 – D-27324 Eystrup – Telephone 0049/4254/93150 – Fax 0049/4254/931524 – E-Mail info@kaiser-kuehne-play.com

We recommend, in addition to our instructions for maintenance, to consider carefully the demands of EN 1176-7



## 0-44350-000 K&K Double see-saw


Recommendations about regular maintenance

Check cleanliness of play- and safety area, take out alien elements

Check other component elements for wear and tight connections, tighten connections and replace defective elements if necessary

Check bearings and/or joints for tight fixing and easy-running function, replace an grease if necessary

Check foundation, foundation anchoring and whole construction for or decay, repair or replace if necessary.

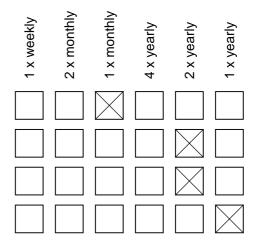

## Please pay attention!

The mentioned maintainance intervals are a recommendation only. They have to be accomodated to the needs and circumstances of a certain playground (e.g.due to the fequency of use, social facilities and vandalism problems etc.).