

Instructions for maintenance

© 2008 Kaiser & Kühne Freizeitgeräte GmbH

Im Südloh 5 – D-27324 Eystrup – Telephone 0049/4254/93150 – Fax 0049/4254/931524 – E-Mail info@kaiser-kuehne-play.com

We recommend, in addition to our instructions for maintenance, to consider carefully the demands of EN 1176-7



K&K **0-57082-001 Squat turn exerciser**

One-time maintenance



Check all screw connections; if necessary screw down again.

one-time only
approx. 4-5 weeks after installation

Recommendations about regular maintenance



Check cleanliness of play- and safety area, take out alien elements



Check stability of vertical posts, tighten bolt-connections if necessary



Check other component elements for wear and tight connections, tighten connections and replace defective elements if necessary



Check foundation, foundation anchoring and whole construction for corrosion, repair or replace if necessary.



Please note:

The mentioned maintenance intervals are a recommendation only. They have to be adjusted to the needs and circumstances of a certain playground (e.g. due to the frequency of use, social facilities and vandalism problems etc.)