

Instructions for maintenance

© 2016 Kaiser & Kühne Freizeitgeräte GmbH

Im Südloh 5 - D-27324 Eystrup - Telephone 0049/4254/93150 - Fax 0049/4254/931524 - E-Mail info@kaiser-kuehne-play.com

We recommend, in addition to our instructions for maintenance, to consider carefully the demands of EN 1176-7

0-41865-701 Hill Slide (2,50) incl. square platform 0,20m



One-time maintenance one-time only Check all screw connections; if necessary screw down again. Cover screw-head with protecting cap. approx. 4-5 weeks after installation Recommendations x monthly about regular maintenance Check cleanliness of play- and safety area, take out alien elements Check stability of vertical posts, tighten bolt-connections if necessary Check other component elements for wear and tight connections, tighten connections and replace defective elements if necessary Check slide chutes for cleanliness, take out protruding elements, repair defect sliding sheet metal Clean playsand/playbark Check foundation, foundation anchoring and whole construction for corrosion or decay, repair or replace if necessary. In case of dry shakes remove splinters and brake chamfer edges Varnish laminated cross beams under platforms with a general wood preservative

Please note:

The mentioned maintenance intervals are a recommendation only. They have to be adjusted to the needs and circumstances of a certain playground (e.g. due to the frequency of use, social facilities and vandalism problems etc.)

^{*} NB: Please varnish on an annual basis for the first 4 years, and every two years thereafter!