

- 1. Assign a device location considering the space requirements (impact area).
- Excavate soil for foundations, according to drawing. Please note: To achieve maximum stability and a safe installation, a moderate level of soil solubility is required.
- 3. Pour in a drain layer of gravel of approx. 10 cm thickness between the bottom of the posts and plain base of foundation.
- 4. Insert reinforcing steel into the corresponding holes of the posts.
- 5. Place posts type A according to the corresponding number (see foundation layout) into the respective foundation hole. Play level mark (=aluminium blind rivet) complies with the installation depth. Align every post by means of the play level mark facing into the same direction (see detail or foundation layout).
- 6. For installation of the pre-assembled components and/or single parts, the screws slightly have to be lubricated with installation paste

Tighten all screws after having aligned all components.

Screw connections see details in attached list.


We recommend not to insert the protection caps enclosed before first maintenance as they are only suitable for one-time use (see description below).

- 7. Grout foundations with compressed concrete C20/25, chamfer and round off the edges, cover the foundations with a surface which meets the requirements for impact attenuation so that its critical fall height is equal to or greater than the maximum free height of fall of the equipment (acc. to EN 1176-1).
- 8. Release for play after concrete foundations have set.
- 9. According to maintenance instructions, check all screw connections after 4–5 weeks and retighten, if necessary. Afterwards cover the screw heads with protection caps as follows: the non-countersunk drills have to be covered with the red protection caps by placing them onto the base part. Strongly pound them (e.g. by using a plastic mallet) until they audibly snap into the base part groove.

Please ensure that all special tools supplied (e.g. Allen key for secured Allen screws etc.) and all specific documents which are or may be useful for safety management acc. to EN 1176-7 (e.g. invoice, delivery note, order acknowledgement, installation instructions, maintenance instructions) are forwarded to the persons responsible.

Necessarily insert all attachment parts before tightening the screws. It is NOT possible to insert them afterwards.


detail of check mark 1:5

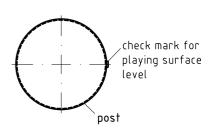

Date

12/18 EB

Designation K&K Arch bridge

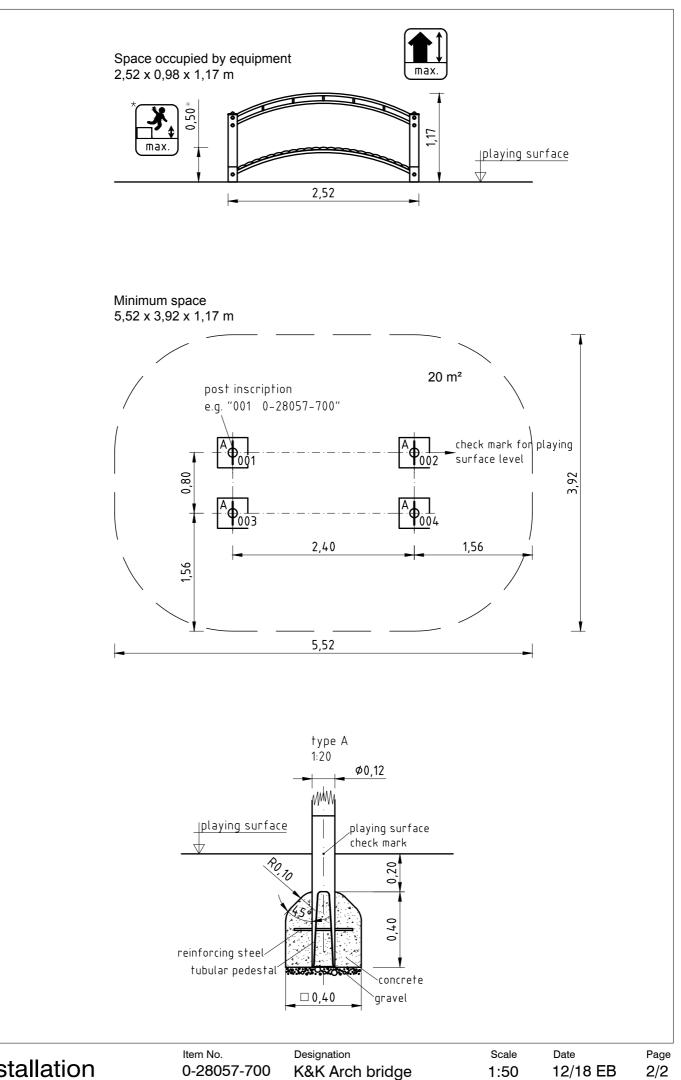

Installation

Kaiser & Kühne Freizeitgeräte

1 028057700 1298858 Item: Order: K&K Arch bridge Location: **Building Project:** 12 x SFRS1210001 Standard bolting of barriers, handrails, slides to Robinia posts per SC Total K&K-Item Marking 1 x 12 x 3300054 red protective screw cap - lower part, domed M12 12 x 3300055 red protective screw cap - upper part, domed M12 1 x 3430025 Washer Ø 13 DIN125 A2 1 x 12 x 12 x 3400702 Hexagon head cap screw M12 x 160 DIN931 A2 0 1 x with screw security coating FGB red 4 x SFES1270007 Reinforcing steel for tubular pedestals per SC Total K&K-Item Marking Reinforcing steel Ø 10 x 310 DIN 488 1 x 4 x 2130000 1 x SFWZ0000014 Lubricating metal, bag (4g) per SC K&K-Item Total Marking 1 x 1 x 5300024 Metaflux fitting lubricant 2x4 g


Page 1 1

List of screw connections

Instructions for maintenance



In addition to the manufacturerrelated service instructions, we strongly advise the operator/owner to consider the corresponding prescriptions of the European Standard EN1176-7.

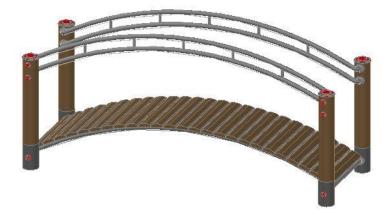

K&K Arch 028057700 bridge

One-time maintenance

 $\left|\right>$

Check all screw connections; retighten, if necessary. Cover screw heads with the protective screw caps furnished.

once,

approx. 4-5 weeks after installation

Recommended regular inspection and maintenance	once a week	twice per month	once a month	four times a year	twice a year	once a year
Where appropriate, clean playing sand						
Check cleanliness of playing and safety area. Remove any foreign object						
In case of drying cracks, remove splinters of wood and chamfer sharp edges						
Where appropriate, check synthetic surfacing material for damages or severe wear, repair or replace, if necessary						
Check tightness of stand construction: stability of (vertical) posts or supports, retighten screw connections, if necessary.						
Check further structural components for wear and tightness; retighten, if necessary and replace defective parts.						
Check tightness/stability of the connection between stainless steel support and laminated timber post, replace post, if necessary.						
Check foundations and structural construction for corrosion or decay, repair or replace if necessary						

Please note: The above-mentioned maintenance intervals only have recommendatory character. They must necessarily be adapted to the local circumstances of each playground (frequency of use, social setting, risk and frequency of vandalism etc.).