Instructions for maintenance

© 2010 Kaiser & Kühne Freizeitgeräte GmbH

Im Südloh 5 – D-27324 Eystrup – Telephone 0049/4254/93150 – Fax 0049/4254/931524 – E-Mail info@kaiser-kuehne-play.com

We recommend, in addition to our instructions for maintenance, to consider carefully the demands of EN 1176-7

0-40332-000

K&K Standard swing (2,00 m)



One-time maintenance

Check all screw connections; if necessary screw down again.

one-time only approx. 4-5 weeks after installation

x monthl

x yearly

 
x yearly

l x yearly

x monthly

x weekly

Recommendations about regular maintenance



Check cleanliness of play- and safety area, take out alien elements

Check stability of vertical posts, tighten bolt-connections if necessary

Check other component elements for wear and tight connections, tighten connections and replace defective elements if necessary

Check chain suspensions for wear, replace if necessary

Please pay attention that the cylinder head screw in the chain adapter has to be well screwed down with a ratchet wrench, without over winding the hexagon socket

Check bearings and/or joints for tight fixing and easy-running function

Check rubber parts like seats, hoses, collars etc. for wear replace if necessary

ections, essary	
he chain rench,	
ning	
,	
ruction for	

Check foundation, foundation anchoring and whole construction for corrosion, repair or replace if necessary.

Please note:

The mentioned maintenance intervals are a recommendation only. They have to be adjusted to the needs and circumstances of a certain playground (e.g. due to the frequency of use, social facilities and vandalism problems etc.)