Instructions for maintenance

© 2010 Kaiser & Kühne Freizeitgeräte GmbH

Im Südloh 5 – D-27324 Eystrup – Telephone 0049/4254/93150 – Fax 0049/4254/931524 – E-Mail info@kaiser-kuehne-play.com

We recommend, in addition to our instructions for maintenance, to consider carefully the demands of EN 1176-7

0-40330-000

K&K Standard swing (2,00 m)



One-time maintenance

Check all screw connections; if necessary screw down again.

one-time only approx. 4-5 weeks after installation

Recommendations

	Recommendations	Ś	thly	thly	≥	≥	≥
	about regular maintenance	1 x weekly	2 x monthly	1 x monthly	4 x yearly	2 x yearly	1 x yearly
\times	Check cleanliness of play- and safety area, take out alien elements						
\times	Check stability of vertical posts, tighten bolt-connections if necessary						
\times	Check other component elements for wear and tight connections, tighten connections and replace defective elements if necessary						
\mathbf{X}	Check chain suspensions for wear, replace if necessary						
\times	Please pay attention that the cylinder head screw in the chain adapter has to be well screwed down with a ratchet wrench, without over winding the hexagon socket						
\times	Check bearings and/or joints for tight fixing and easy-running function						
\ge	Check rubber parts like seats, hoses, collars etc. for wear, replace if necessary						
\times	Check foundation, foundation anchoring and whole construction for corrosion, repair or replace if necessary.						

Please note:

The mentioned maintenance intervals are a recommendation only. They have to be adjusted to the needs and circumstances of a certain playground (e.g. due to the frequency of use, social facilities and vandalism problems etc.)