Instructions for maintenance

© 2012 Kaiser & Kühne Freizeitgeräte GmbH

Im Südloh 5 – D-27324 Eystrup – Telephone 0049/4254/93150 – Fax 0049/4254/931524 – E-Mail info@kaiser-kuehne-play.com

We recommend, in addition to our instructions for maintenance, to consider carefully the demands of EN 1176-7

0-40553-000 K&K Contact swing (2,50)

One-time maintenance							
Check all screw connections; if necessary screw down again. Cover screw-head with protecting cap.		one-time only approx. 4-5 weeks after installation					
Recommendations about regular maintenance	1 x weekly	2 x monthly	1 x monthly	4 x yearly	2 x yearly	1 x yearly	
Check cleanliness of play- and safety area, take out alien elements							
Check stability of vertical posts, tighten bolt-connections if necessary							
Check other component elements for wear and tight connections, tighten connections and replace defective elements if necessary							
Check chain suspensions for wear, replace if necessary							
Please pay attention that the cylinder head screw in the chain adapter has to be well screwed down with a ratchet wrench, without overwinding the hexagon socket							
Check bearings and/or joints for tight fixing and easy-running function							
Check rubber parts like seats, hoses, collars etc. for wear, replace if necessary							
Check foundation, foundation anchoring and whole construction for corrosion, repair or replace if necessary.							

Please note:

The mentioned maintenance intervals are a recommendation only. They have to be adjusted to the needs and circumstances of a certain playground (e.g. due to the frequency of use, social facilities and vandalism problems etc.)