

Instructions for maintenance

©2010 Kaiser & Kühne Freizeitgeräte GmbH

Im Südlöh 5 – D-27324 Eystrup – Telephone 0049/4254/93150 – Fax 0049/4254/931524 – E-Mail info@kaiser-kuehne-play.com

We recommend, in addition to our instructions for maintenance, to consider carefully the demands of EN 1176-7



K&K 0-40342-000 Standard swing (2,50)

One-time maintenance



Check all screw connections; if necessary screw down again.

one-time only
approx. 4-5 weeks after installation

Recommendations about regular maintenance



Check cleanliness of play- and safety area, take out alien elements

1 x weekly

2 x monthly

1 x monthly

4 x yearly

2 x yearly

1 x yearly



Check stability of vertical posts, tighten bolt-connections if necessary



Check other component elements for wear and tight connections, tighten connections and replace defective elements if necessary



Check bearings and/or joints for tight fixing and easy-running function



Check chain suspensions for wear, replace if necessary



Please note that grub screw inside chain adapter has to be tightened e.g. with Allen wrench or catch stoutly without overwinding the screws.



Check rubber parts like seats, hoses, collars etc. for wear, replace if necessary



Check foundation, foundation anchoring and whole construction for corrosion, repair or replace if necessary.



Please note:

The mentioned maintenance intervals are a recommendation only. They have to be adjusted to the needs and circumstances of a certain playground (e.g. due to the frequency of use, social facilities and vandalism problems etc.)