
Instructions for maintenance

© 2007 Kaiser & Kühne Freizeitgeräte GmbH

Im Südloh 5 – D-27324 Eystrup – Telephone 0049/4254/93150 – Fax 0049/4254/931524 – E-Mail info@kaiser-kuehne-play.com

We recommend, in addition to our instructions for maintenance, to consider carefully the demands of EN 1176-7

K&K 0-44280-000 Spring seesaw

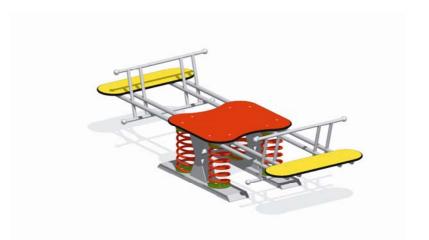

	Recommendations about regular maintenance	1 x weekly	2 x monthly	1 x monthly	4 x yearly	2 x yearly	1 x yearly
	Check cleanliness of play- and safety area, take out alien elements						
	Check stability of construction, tighten bolt-connections if necessary						
	Check other component elements for wear and tight connections, tighten connections and replace defective elements if necessary						
X	Check foundation, foundation anchoring and whole construction for corrosion, repair or replace if necessary.						

Please note:

The mentioned maintenance intervals are a recommendation only. They have to be adjusted to the needs and circumstances of a certain playground (e.g. due to the frequency of use, social facilities and vandalism problems etc.)