
Instructions for maintenance

©2008 Kaiser & Kühne Freizeitgeräte GmbH

Im Südloh 5 – D-27324 Eystrup – Telephone 0049/4254/93150 – Fax 0049/4254/931524 – E-Mail info@kaiser-kuehne-play.com

We recommend, in addition to our instructions for maintenance, to consider carefully the demands of EN 1176-7

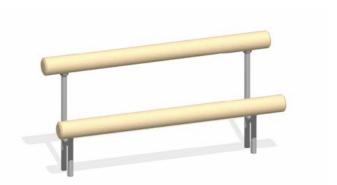

0-60180-300 K&K Teenseat

One-time maintenance

Check all screw connections; if necessary screw down again. Cover screw-head with protecting cap.	one-time only approx. 4-5 weeks after installation					
Recommendations about regular maintenance	1 x weekly	2 x monthly	1 x monthly	4 x yearly	2 x yearly	1 x yearly
Check cleanliness of play- and safety area, take out alien elements						
Check stability of vertical posts, tighten bolt-connections if necessary						
Check other component elements for wear and tight connections, tighten connections and replace defective elements if necessary						
Check foundation, foundation anchoring and whole construction for or decay, repair or replace if necessary.						
In case of dry shakes remove splinters and brake chamfer edges						

Please note:

The mentioned maintenance intervals are a recommendation only. They have to be adjusted to the needs and circumstances of a certain playground (e.g. due to the frequency of use, social facilities and vandalism problems etc.)